




## TOOLBOX BRACKETS PART # 91012

FOR USE WITH THE FOLLOWING  
BACKRACK PART ONLY.

**10502**

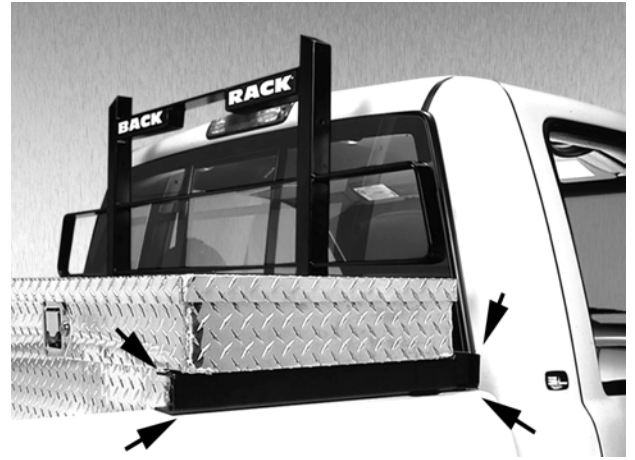

**READ THIS NOW!** If you think that these parts do not fit your make of truck, or if you have any installation questions, call our customer service dept at 1-800265-8137 or 905-849-3633. We will be happy to rectify any problems with you directly. This will be much faster and more efficient for you. Other ways to reach us. E-mail: [mfg@backrack.ca](mailto:mfg@backrack.ca) or fax: 905-849-4116.

### WHAT ARE TOOLBOX BRACKETS?

Toolbox Brackets allow you to install a cross bed Toolbox ( one that sits on the bed rails of your truck). Instead of fastening the Toolbox to the sheet metal of your truck with screws, you fasten the Toolbox to the Toolbox Brackets with screws or whatever fastener is provided with the Toolbox. These brackets also increase the useable space in your truck bed by allowing you to fasten the Toolbox closer to the Backrack Frame. Fasteners to secure the Toolbox to the Toolbox Brackets are not included. The hole in the back end of the Toolbox Brackets is not used, but is available should you wish to drill through your bed rail for extra strength.

### THE TOOLBOX BRACKETS REPLACE THE RAILMOUNT BRACKETS.

The Toolbox Brackets replace the Railmount Brackets that came in the small box inside the Backrack Frame. You no longer have any use for the Railmount Brackets. We suggest you keep them in case you ever get rid of your Toolbox. You will need all the fasteners found in the bag in the original Backrack carton.

### HOW DO I INSTALL THE TOOLBOX BRACKETS?

Follow the instructions provided in the Backrack carton. Apply the premise that the Toolbox Brackets replace the Railmount Brackets. The Toolbox Brackets fasten to the Backrack Frame in the same way the Railmount Brackets do using the 3-1/2" Bolt assembly.

SEE PHOTO ON BACK OF THIS SHEET

Contact us @  
905-849-3633 or 1-800-265-8137. Fax 905-849-4116. E mail: [mfg@backrack.ca](mailto:mfg@backrack.ca)  
WEBSITE: [www.backrack4trucks.com](http://www.backrack4trucks.com)


Insert bolt into pocket



Secure with 1/2" nut



Attach Toolbox Brackets to Backrack frame

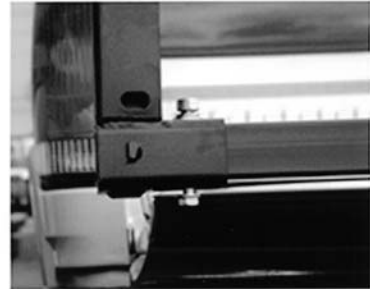

Place Backrack c/w Toolbox Brackets on to bed rail and secure to Stake Pocket Bolts.

